


How to setup printer to open cash drawer automatically?

Your cash drawer can be configured to automatically open when you print a receipt for each transaction. Here are the steps you can take to configure your cash drawer.

1. Plug in the RJ12 connector cable (which looks similar to a phone line) from the cash drawer into your the receipt printer.
2. Next, go to the **Settings** menu in Windows 10, select **Devices** and select **Printers & Scanners** on the left-hand menu.

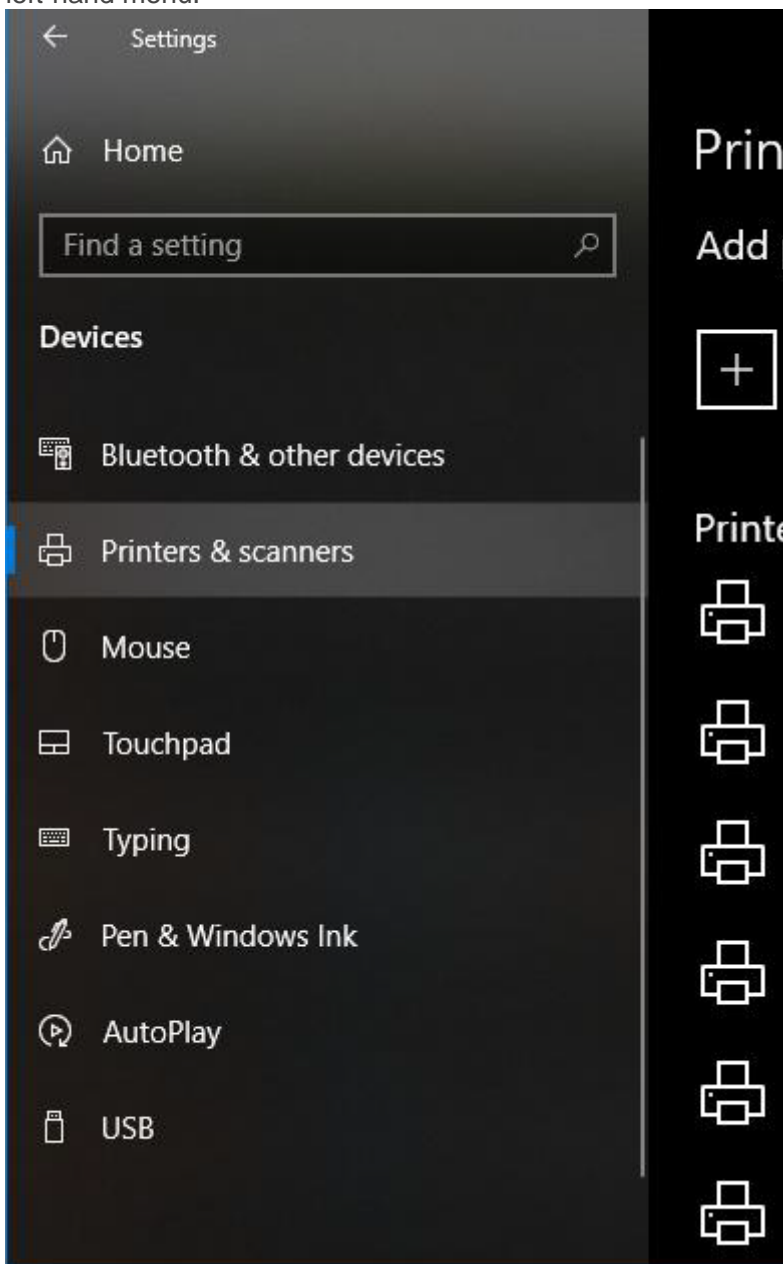

3. Select the printer you'd like to configure, and click on the **Manage** button.
UltimatePOS-Cash-Drawer

4. Next, click on the **Printer Properties** link and a window will open. From here, select the **Device Settings** tab.
UltimatePOS-Cash-drawer
 5. Under **Installable Options**, find the **Peripheral Unit Type** and change it to '**Cash Drawer**'.
UltimatePOS-Cash-drawer
 6. Change the **Peripheral Unit 1** and **Peripheral Unit 2** fields to '**Document Bottom**' to have the drawer open after the receipt starts printing.
*If you want the cash drawer to trigger before the receipt prints, select '**Document Top**' in **Peripheral Unit 1 and 2***
UltimatePOS-Cash-drawer
 7. Click **OK** to save these settings and perform a test sale to see if it's been configured properly.
-

Revision #2

Created 30 September 2025 04:28:02 by Admin

Updated 13 October 2025 08:53:08 by Admin